


ASSEMBLY INSTRUCTIONS

RIDGE VENT UNI (FALZ – DSD) DOUBLE STANDING SEAM

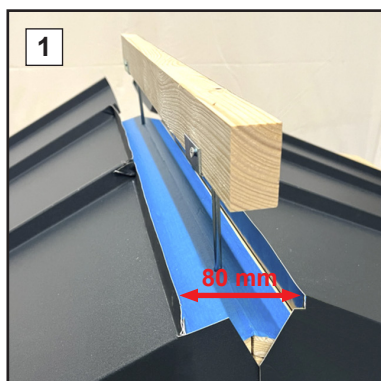


Construction of roof batten installation with standing seam.

The spacing between the roofing materials must be 80 mm.

Required materials:

- ridge batten holder with nail
- roof battens 30 x 50 mm

The blue colour represents the ventilation of the roof surface.

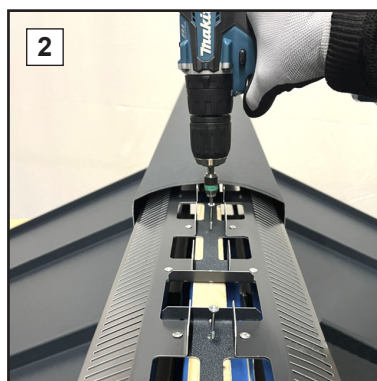


Fasten the ventilation ridge cap to the roof batten using screws.


Every opening must be screwed!



Mark the embossing of the standing seam on the ridge cap.

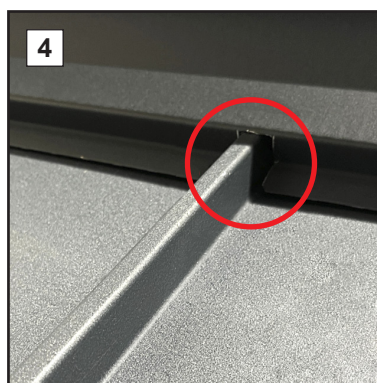


Cut an opening in the ridge cap.

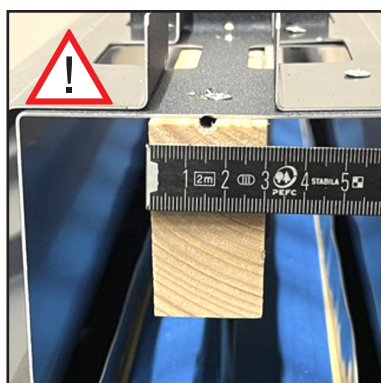


IMPORTANT!

The roof batten can only have dimensions of 30 x 50 mm and must be installed vertically.

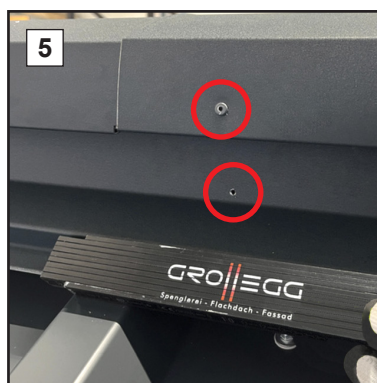


For the method of joining ridge caps see the installation instructions for trapezoidal profiles.

After joining, each joint must be secured with 2 rivets on each side.

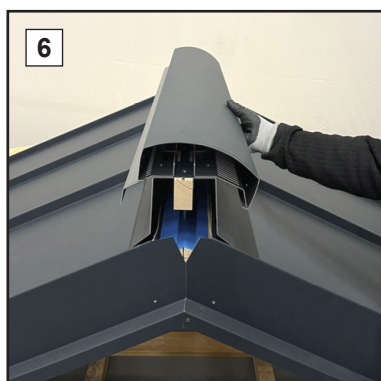

The ridge cap cover can be slide on or snapped into place.

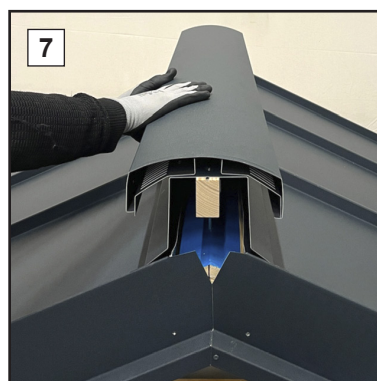

Check the correct fastening of the ridge cap cover.